




תכנות קורא ברקוד אלחוטי דו ממדי - CS2290

<u>Barcode Scan</u>	<u>Suffix</u>	#
	ENTER	1
	TAB	2
	חיץ למטה	3

תכנות חיבור קורא לבסיס שלו


8 Quick setting to wireless network

The steps of setting are:

1. Both the handheld unit and the cradle are in normal working mode. Normally it means that only the blue LED on the handheld unit and only the blue LED on the cradle are ON as shown below.



2. Scan the following barcode.

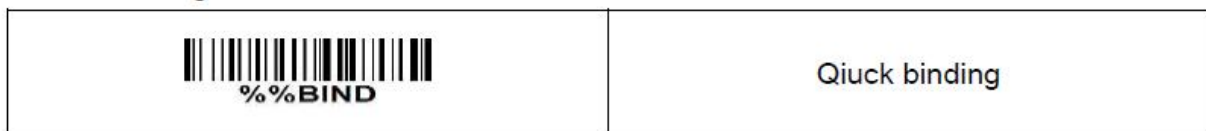

3. The blue LED on the handheld unit will blink and the beeper will beep regularly to indicate that the handheld unit is ready to be positioned onto the cradle.



4. Firmly position the handheld unit onto the cradle within 15 seconds. Two short beeps will be emitted to indicate a successful setting; otherwise, two long beeps and a short beep will be emitted to indicate a failed setting.

Referring to [11 Display firmware version & radio communication setting](#), check the current radio communication setting of the handheld unit and the cradle.